










IBio RESEARCH BUILDING


BASEMENT FLOOR EVACUATION PLAN

WAYNE STATE UNIVERSITY
POLICE DEPARTMENT


EMERGENCY PHONE NUMBER
313-577-2222
WSU PD DISPATCH NON-EMERGENCY
313-577-6057

KEY

-  TO STAIRWELL **EXIT**, THEN EXIT AT FIRST FLOOR
-  TORNADO SHELTER AREA
-  STAIRWELL - AREA OF REFUGE
-  OUTSIDE ASSEMBLY AREA
-  REST ROOMS
-  FIRE ALARM PULL BOX
-  FIRE EXTINGUISHER
-  EMERGENCY PHONE
WSU CAMPUS BLUE LIGHT
-  AUTOMATED EXTERNAL DEFIBRILLATOR UNIT (AED UNIT)
Located on First Floor - Room 1209

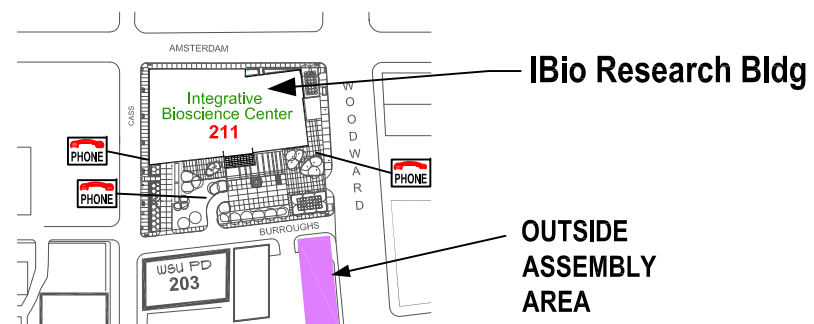

EMERGENCY GUIDELINES

- A. FAMILIARIZE YOURSELF WITH ALL  **EXIT** LOCATIONS.
- B. EVACUATE THE BUILDING WHEN THE FIRE ALARM IS ACTIVATED AND PROCEED TO **OUTSIDE ASSEMBLY AREA**.
- C. IN CASE OF FIRE, **DO NOT** USE THE ELEVATORS
- D. IN THE EVENT OF SEVERE WEATHER WARNING, PROCEED TO A DESIGNATED **TORNADO SHELTER AREA**, OR TO NEAREST **RESTROOM** AS NECESSARY OR INSTRUCTED TO DO SO BY MANAGEMENT.



NORTH



IBio RESEARCH BUILDING

FIRST FLOOR EVACUATION PLAN

WAYNE STATE UNIVERSITY
POLICE DEPARTMENT

EMERGENCY PHONE NUMBER
313-577-2222

WSU PD DISPATCH NON-EMERGENCY
313-577-6057


KEY



TO STAIRWELL **EXIT**, THEN
EXIT AT FIRST FLOOR



TORNADO SHELTER AREA



STAIRWELL - AREA OF REFUGE



OUTSIDE ASSEMBLY AREA



REST ROOMS



FIRE ALARM PULL BOX




FIRE EXTINGUISHER



EMERGENCY PHONE
WSU CAMPUS BLUE LIGHT



AUTOMATED EXTERNAL
DEFIBRILLATOR UNIT (AED UNIT)
Located on First Floor - Room 1209

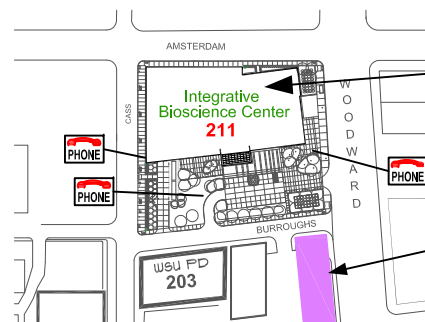

IBio Research Bldg

OUTSIDE
ASSEMBLY
AREA

EMERGENCY GUIDELINES

- FAMILIARIZE YOURSELF WITH ALL **EXIT** LOCATIONS.
- EVACUATE THE BUILDING WHEN THE FIRE ALARM IS ACTIVATED AND PROCEED TO **OUTSIDE ASSEMBLY AREA**.
- IN CASE OF FIRE, **DO NOT** USE THE ELEVATORS
- IN THE EVENT OF SEVERE WEATHER WARNING, PROCEED TO A DESIGNATED **TORNADO SHELTER AREA**, OR TO NEAREST **RESTROOM** AS NECESSARY OR INSTRUCTED TO DO SO BY MANAGEMENT.

LOCATION MAP

Bldg # 211
JULY 2015




IBio RESEARCH BUILDING

SECOND FLOOR EVACUATION PLAN








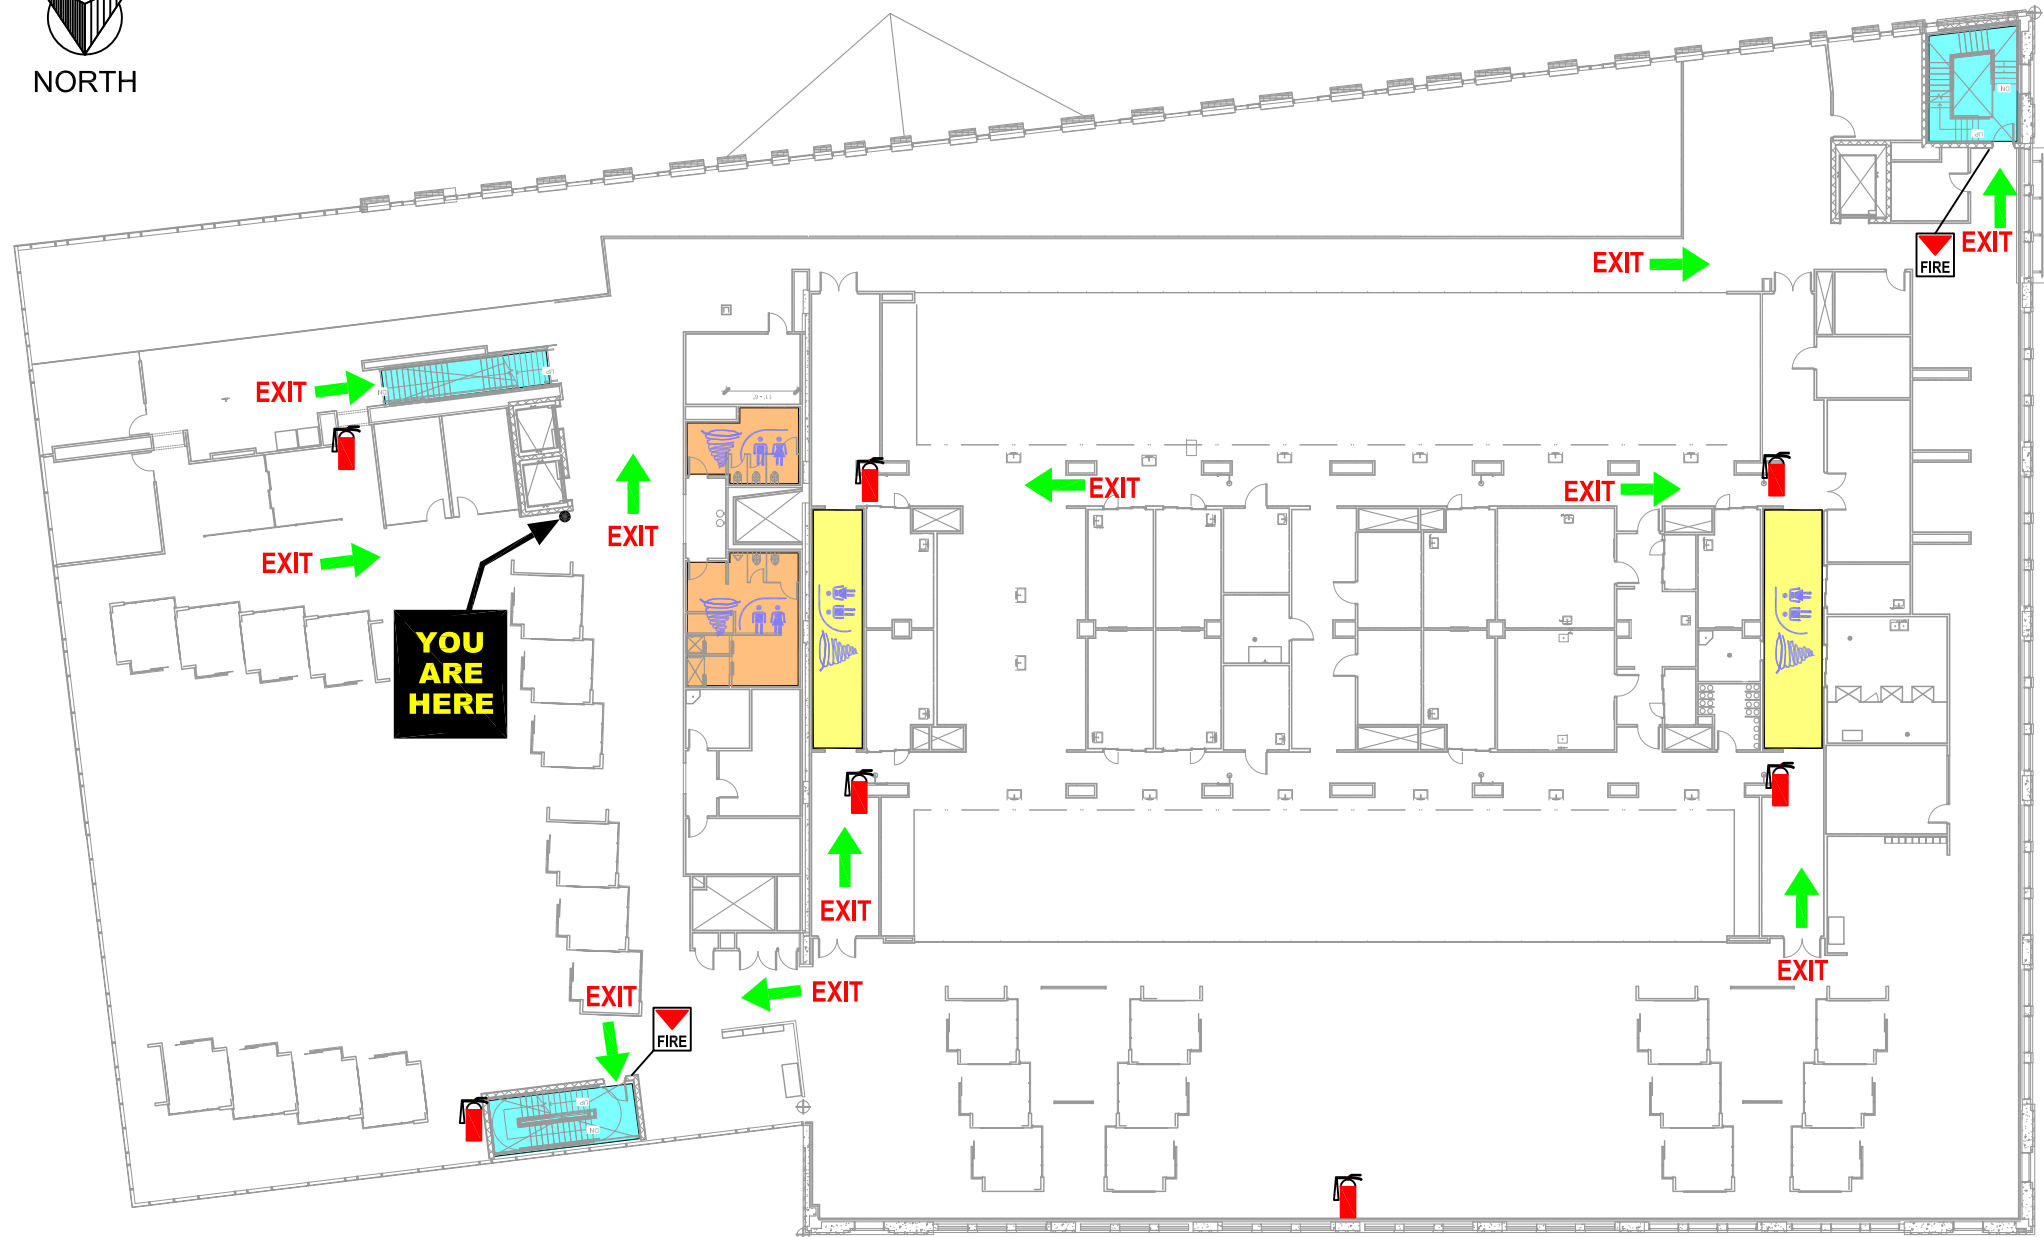

WAYNE STATE UNIVERSITY
POLICE DEPARTMENT

EMERGENCY PHONE NUMBER
313-577-2222


WSU PD DISPATCH NON-EMERGENCY
313-577-6057




KEY

-  TO STAIRWELL **EXIT**, THEN EXIT AT FIRST FLOOR
-  TORNADO SHELTER AREA
-  STAIRWELL - AREA OF REFUGE
-  OUTSIDE ASSEMBLY AREA
-  REST ROOMS
-  FIRE ALARM PULL BOX
-  FIRE EXTINGUISHER
-  EMERGENCY PHONE
WSU CAMPUS BLUE LIGHT
-  AUTOMATED EXTERNAL DEFIBRILLATOR UNIT (AED UNIT)
Located on First Floor - Room 1209

EMERGENCY GUIDELINES

- A. FAMILIARIZE YOURSELF WITH ALL  **EXIT** LOCATIONS.
- B. EVACUATE THE BUILDING WHEN THE FIRE ALARM IS ACTIVATED AND PROCEED TO **OUTSIDE ASSEMBLY AREA**.
- C. IN CASE OF FIRE, **DO NOT** USE THE ELEVATORS
- D. IN THE EVENT OF SEVERE WEATHER WARNING, PROCEED TO A DESIGNATED **TORNADO SHELTER AREA**, OR TO NEAREST **RESTROOM** AS NECESSARY OR INSTRUCTED TO DO SO BY MANAGEMENT.

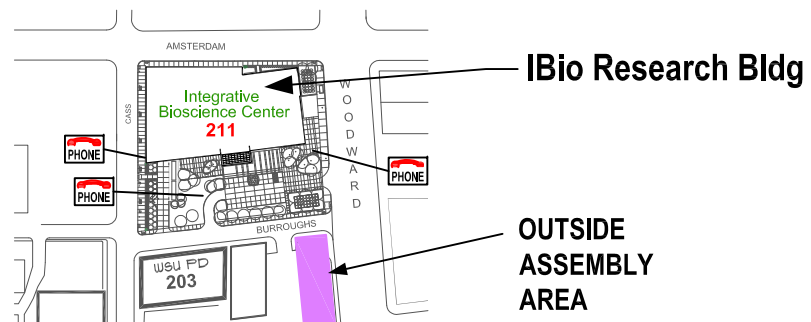

LOCATION MAP

Bldg # 211
JULY 2015



IBio RESEARCH BUILDING

THIRD FLOOR EVACUATION PLAN










WAYNE STATE UNIVERSITY
POLICE DEPARTMENT


EMERGENCY PHONE NUMBER
313-577-2222

WSU PD DISPATCH NON-EMERGENCY
313-577-6057




KEY

-  TO STAIRWELL **EXIT**, THEN EXIT AT FIRST FLOOR
-  TORNADO SHELTER AREA
-  STAIRWELL - AREA OF REFUGE
-  OUTSIDE ASSEMBLY AREA
-  REST ROOMS
-  FIRE ALARM PULL BOX
-  FIRE EXTINGUISHER
-  EMERGENCY PHONE
WSU CAMPUS BLUE LIGHT
-  AUTOMATED EXTERNAL DEFIBRILLATOR UNIT (AED UNIT)
Located on First Floor - Room 1209

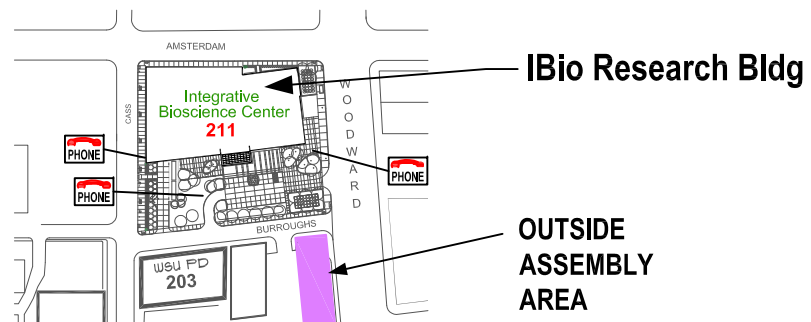

EMERGENCY GUIDELINES

- A. FAMILIARIZE YOURSELF WITH ALL  **EXIT** LOCATIONS.
- B. EVACUATE THE BUILDING WHEN THE FIRE ALARM IS ACTIVATED AND PROCEED TO **OUTSIDE ASSEMBLY AREA**.
- C. IN CASE OF FIRE, **DO NOT** USE THE ELEVATORS
- D. IN THE EVENT OF SEVERE WEATHER WARNING, PROCEED TO A DESIGNATED **TORNADO SHELTER AREA**, OR TO NEAREST **RESTROOM** AS NECESSARY OR INSTRUCTED TO DO SO BY MANAGEMENT.