

WAYNE STATE UNIVERSITY POLICE DEPARTMENT EMERGENCY PHONE NUMBER

577-2222

<u>KEY</u>

-

TO STAIRWELL EXIT EXIT AT FIRST FLOOR



🎁 TORNADO SHELTER AREA



STAIRWELL- AREA OF REFUGE



OUTSIDE ASSEMBLY AREA



REST ROOMS



FIRE ALARM PULL BOX




FIRE EXTINGUISHER



CAMPUS PHONE

- A. FAMILIARIZE YOURSELF WITH ALL EXIT LOCATIONS.
- B. EVACUATE THE BUILDING WHEN THE FIRE ALARM IS ACTIVATED AND PROCEED TO THE OUTSIDE ASSEMBLY AREA.
- C. IN CASE OF FIRE, DO NOT USE THE ELEVATORS
- D. IN THE EVENT OF SEVERE WEATHER WARNING,
 PROCEED TO A DESIGNATED TORNADO SHELTER AREA
 RESTROOM OR BASEMENT AS NECESSARY
 OR INSTRUCTED TO DO SO BY MANAGEMENT.

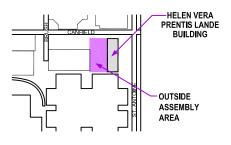






HELEN VERA PRENTIS LANDE BUILDING

FIRST FLOOR EVACUATION PLAN

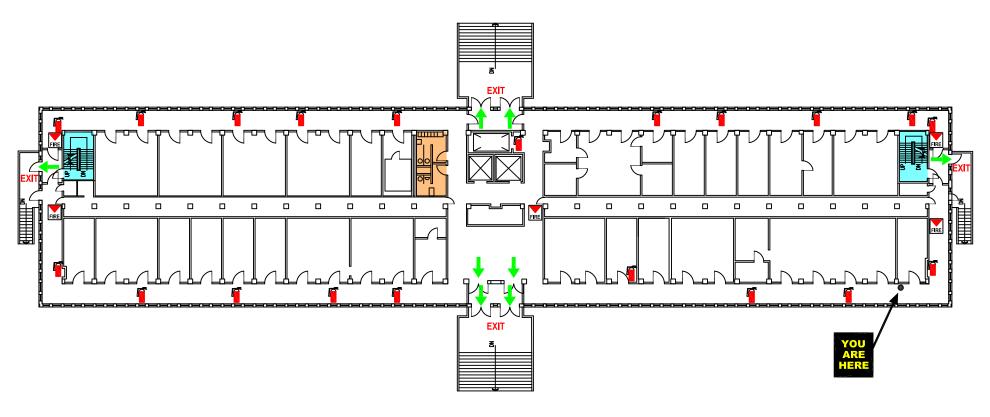





WAYNE STATE UNIVERSITY POLICE DEPARTMENT EMERGENCY PHONE NUMBER

577-2222

TO OUTSIDE EXIT TO FIRE ALARM F






FIRE ALARM PULL BOX



FIRE EXTINGUISHER

- A. FAMILIARIZE YOURSELF WITH ALL EXIT LOCATIONS.
- B. EVACUATE THE BUILDING WHEN THE FIRE ALARM IS ACTIVATED AND PROCEED TO THE OUTSIDE ASSEMBLY AREA.
- C. IN CASE OF FIRE, DO NOT USE THE ELEVATORS
- D. IN THE EVENT OF SEVERE WEATHER WARNING,
 PROCEED TO A DESIGNATED TORNADO SHELTER AREA
 RESTROOM. OR BASEMENT AS NECESSARY
 OR INSTRUCTED TO DO SO BY MANAGEMENT.

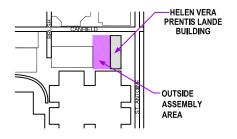



HELEN VERA PRENTIS LANDE BUILDING

SECOND FLOOR EVACUATION PLAN

WAYNE STATE UNIVERSITY POLICE DEPARTMENT EMERGENCY PHONE NUMBER

577-2222

<u>KEY</u>

-

TO STAIRWELL EXIT EXIT AT FIRST FLOOR



🎁 TORNADO SHELTER AREA



STAIRWELL- AREA OF REFUGE



OUTSIDE ASSEMBLY AREA



REST ROOMS



FIRE ALARM PULL BOX




FIRE EXTINGUISHER




CAMPUS PHONE

- A. FAMILIARIZE YOURSELF WITH ALL EXIT LOCATIONS.
- B. EVACUATE THE BUILDING WHEN THE FIRE ALARM IS ACTIVATED AND PROCEED TO THE OUTSIDE ASSEMBLY AREA.
- C. IN CASE OF FIRE, DO NOT USE THE ELEVATORS
- D. IN THE EVENT OF SEVERE WEATHER WARNING,
 PROCEED TO A DESIGNATED TORNADO SHELTER AREA
 RESTROOM OR BASEMENT AS NECESSARY
 OR INSTRUCTED TO DO SO BY MANAGEMENT.

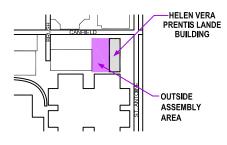





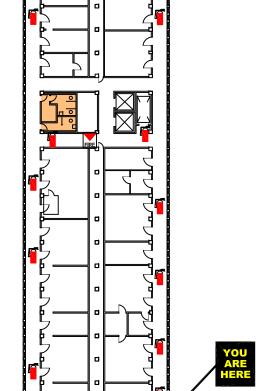

HELEN VERA PRENTIS LANDE BUILDING

THIRD FLOOR EVACUATION PLAN

WAYNE STATE UNIVERSITY POLICE DEPARTMENT **EMERGENCY PHONE NUMBER**

577-2222

<u>KEY</u>

TO STAIRWELL EXIT **EXIT AT FIRST FLOOR**



🍿 TORNADO SHELTER AREA



STAIRWELL- AREA OF REFUGE



OUTSIDE ASSEMBLY AREA





FIRE ALARM PULL BOX




FIRE EXTINGUISHER




CAMPUS PHONE

- A. FAMILIARIZE YOURSELF WITH ALL **EXIT** LOCATIONS.
- B. EVACUATE THE BUILDING WHEN THE FIRE ALARM IS ACTIVATED AND PROCEED TO THE OUTSIDE ASSEMBLY AREA.
- C. IN CASE OF FIRE, DO NOT USE THE ELEVATORS
- D. IN THE EVENT OF SEVERE WEATHER WARNING, PROCEED TO A DESIGNATED TORNADO SHELTER AREA, RESTROOM OR BASEMENT AS NECESSARY OR INSTRUCTED TO DO SO BY MANAGEMENT.

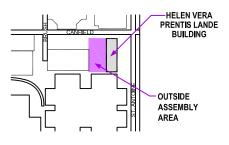



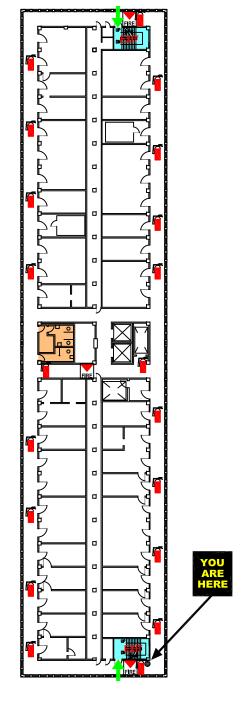



HELEN VERA PRENTIS LANDE BUILDING

FOURTH FLOOR EVACUATION PLAN

WAYNE STATE UNIVERSITY POLICE DEPARTMENT EMERGENCY PHONE NUMBER

577-2222

<u>KEY</u>

-

TO STAIRWELL EXIT EXIT AT FIRST FLOOR



🎁 TORNADO SHELTER AREA



STAIRWELL- AREA OF REFUGE



OUTSIDE ASSEMBLY AREA



REST ROOMS



FIRE ALARM PULL BOX



FIRE EXTINGUISHER



CAMPUS PHONE

- A. FAMILIARIZE YOURSELF WITH ALL EXIT LOCATIONS.
- B. EVACUATE THE BUILDING WHEN THE FIRE ALARM IS ACTIVATED AND PROCEED TO THE OUTSIDE ASSEMBLY AREA.
- C. IN CASE OF FIRE, DO NOT USE THE ELEVATORS
- D. IN THE EVENT OF SEVERE WEATHER WARNING,
 PROCEED TO A DESIGNATED TORNADO SHELTER AREA
 RESTROOM OR BASEMENT AS NECESSARY
 OR INSTRUCTED TO DO SO BY MANAGEMENT.

